
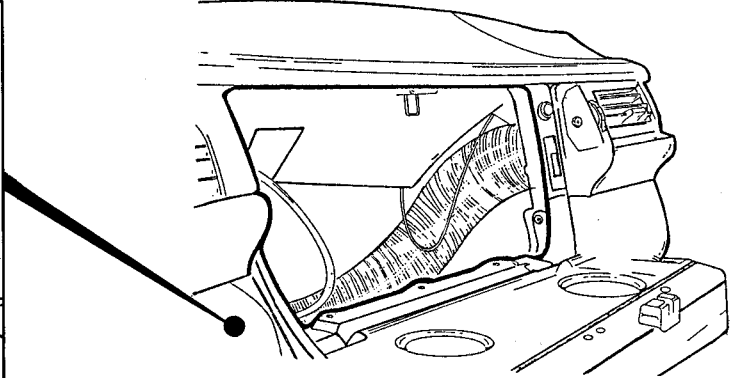


83-558 Removal and installation of air conditioner/automatic temperature control unit (up to 08/87)

Operation no. of operation texts and work units or standard texts
and flat rates 83-0648

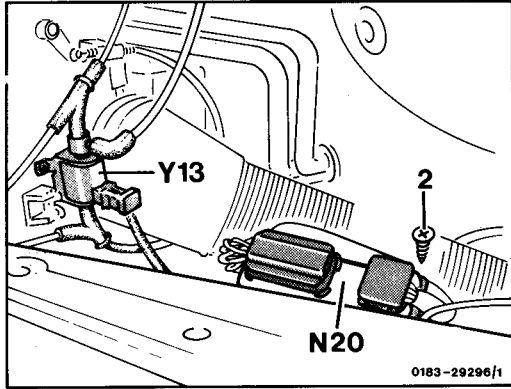

- | | |
|---|-------------|
| Glove box | remove. |
| 6- and 12-pin connectors on control unit (N20) .. | disconnect. |
| Screw (2) | screw out. |
| In opposite order | reinstall. |

558