




83-562 Testing, removal and installation of switch for air conditioner/automatic temperature control (up to 08/87)

Operation no. of operation texts and work units or standard texts and flat rates

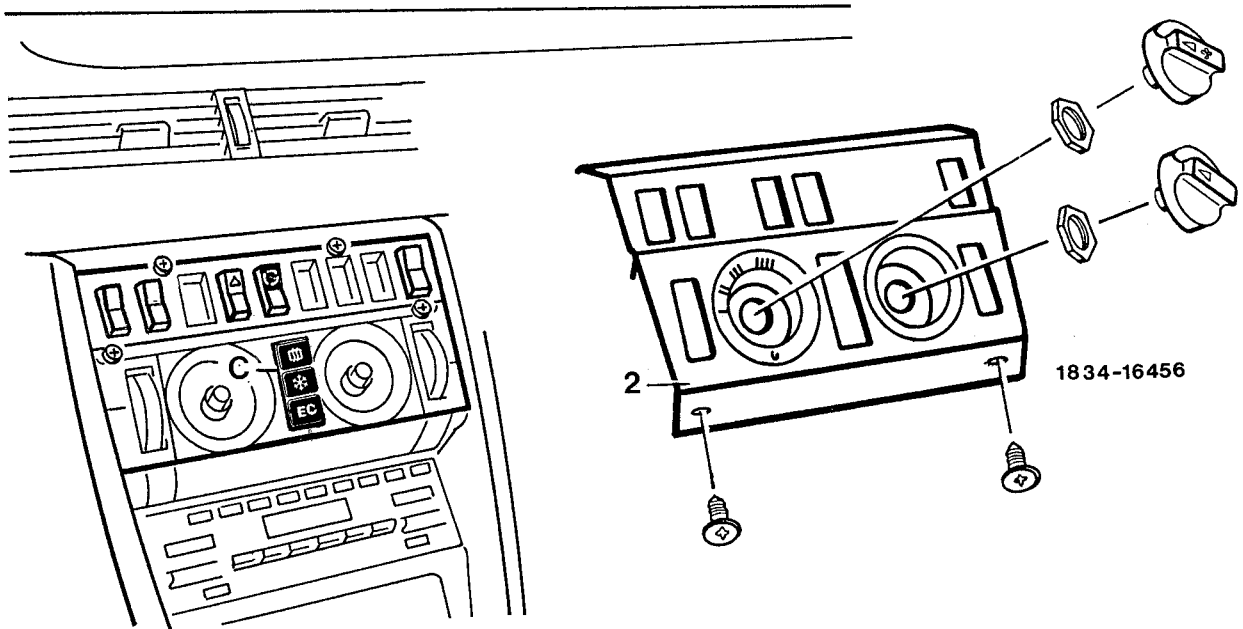


Cover (2)	remove.
Air conditioner switch (C)	disconnect, test.
Reinstall	in opposite order.

Testing

- 1 Connect ohmmeter to terminals 3 and 4.
- 2 Set switch to function . Then switch on function .

Specification: < 1 Ω in each case.

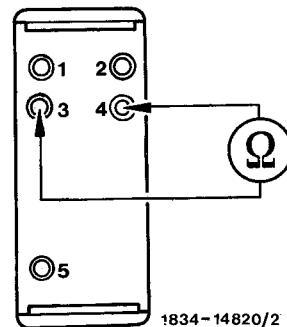

3 Connect ohmmeter to terminals 1 and 2.
Leave function switch  switched on.

Specification: $< 1 \Omega$.

