


X11/4 Diagnostic connector (diagnostic trouble code, 16-pole)

1	Ground (battery) (W10)	9	Roll bar control module (N53)
2	Pushbutton switch s1 (with LED) USA California	10	A/C compressor control module (N6)
3	(not used)	11	ATA control module (N26)
4	LED USA California	12	Infrared remote control module IFZ (N54)
5	ASD control module (N30/2)	13	(not used)
6	SRS control module (N2/2)	14	Electronic accelerator control module (EA) (N4/1)
7	Automatic A/C pushbutton control module (N22)		Cruise control amplifier (CC) (N4)
8	Engine control module (HFM-SFI) (N3/4)	15	(not used)
		16	Fuse and relay box (F1) Fuse 6, terminal 15 (F1-6)

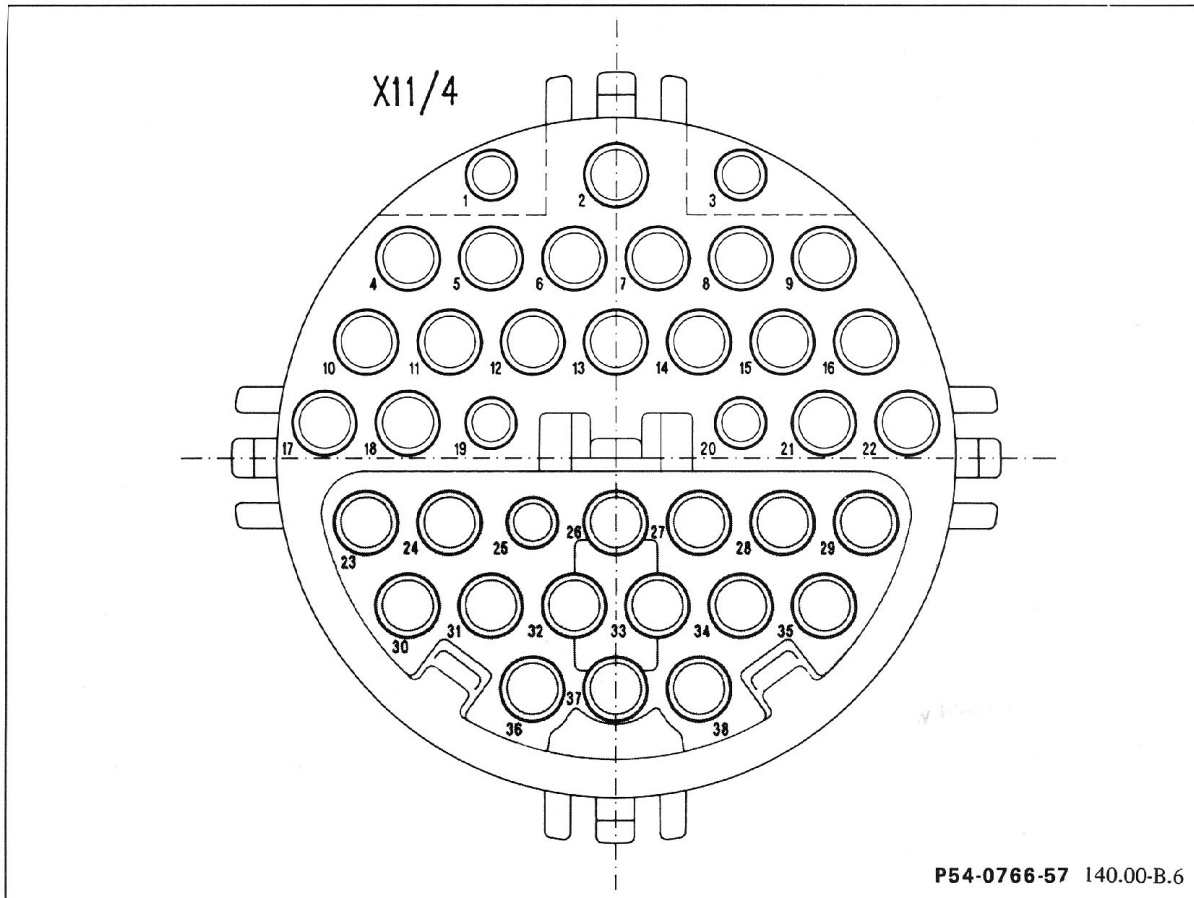

X11/4 Data link connector (diagnostic trouble code, 38-pole)

- | | |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>1 - Ground (battery) (W10)
- Ground (component compartement) (W16)
- A/C compressor control module (N6)</p> <p>2 - Voltage circuit 87
- AJC control module (N8/2)
- A/C compressor control module (N6)</p> <p>3 - F1 Fuse and relay box
- F1-9 fuse 9, circuit 30 (USA)</p> <p>4 - LH-SFI control module (N3/1)
- ISC control module (N8)
- EDS control module (N39)</p> | <p>5 - ADS control module (N30/2)</p> <p>6 - ABS control module (N30)
- ASR control module (N30/1)</p> <p>7 - CC/ISC control module (N4/3)
- EA/CC/ISC control module (N4/1)
- A/C pushbutton control module (Automatic A/C) (N22)</p> <p>8 - Base module (BM, N16/1)
- Engine control module (HFM-SFI),(N3/4)</p> <p>9 - ASD control module (N30/2)
- RB control module (crash deployment), (N53)</p> |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

X11/4 Data link connector (diagnostic trouble code, 38-pole)

10	- CC/ISC control module (N4/3)	17	- DI control module (N1/3)
	- EA/CC/ISC control module (N4/1)	18	- (not connected)
	- A/C compressor control module (N6)	19	- Diagnostic module (OBD I), (N59)
	- Engine control module (HFM-SFI),(N3/4)	20	- (not connected)
	- Transmission control module (TCM) (5-speed automatic) (N15/1)	21	- (not connected)
11	- ATA control module (N26)	22	- (not connected)
12	- (not connected)	23	- ATA control module (N26)
13	- TN-speed signal	24	- (not connected)
14	- CC/ISC control module (N4/3)	25	- (not connected)
	- EA/CC/ISC control module (N4/1)	26	- (not connected)
15	- (not connected)	27	- (not connected)
16	- Engine control module (HFM-SFI),(N3/4)	28	- (not connected)
	- A/C compressor control module (N6)	29	- (not connected)
	- A/C pushbutton control module (Automatic A/C) (N22)	30	- SRS control module (N2/2)
	- EGR/resonance intake manifold control module (N37/3)	31	- (not connected)
	- Overvoltage protection relay module (K1/2)	32	- (not connected)
	- Heated windshield washer system thermoswitch (S26/1)	33	- (not connected)
		34	- (not connected)
		35	- (not connected)
		36	- (not connected)
		37	- (not connected)
		38	- (not connected)