


07.3-6520 Removing and installing injection valves

Operation no. of operation texts and work units or standard texts
and flat rates:
07-6520.

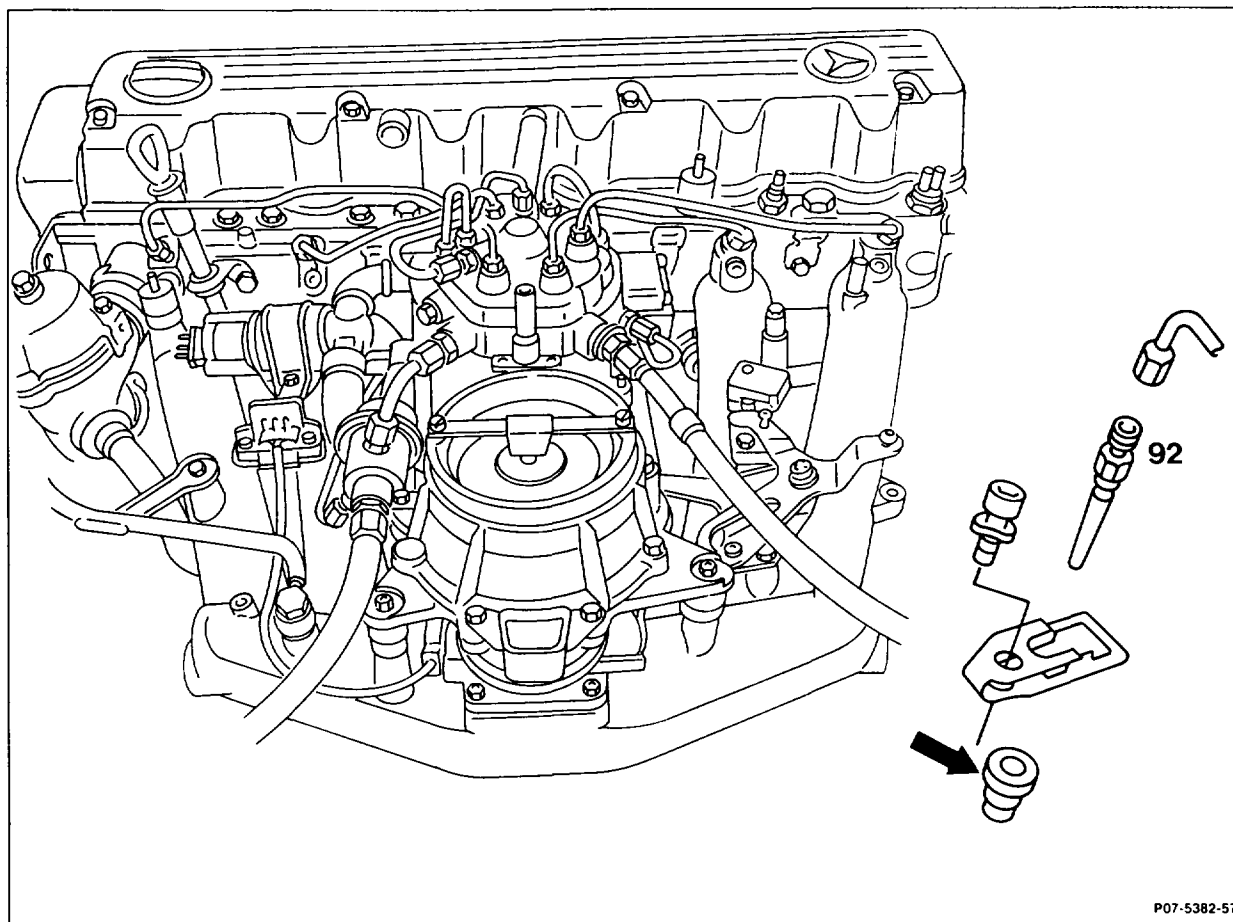

P07-5382-57

Injection lines	remove, install, counter-hold injection valves 10-15 Nm (reference value).
Holder	unscrew, screw on.
Injection valves (92)	remove.
Rubber seal (arrow)	replace.

Notes**Models 107, 124, 126, 201**

Insert of injection valves made of brass

Production breakpoint: June–September 1987

Model	Engine	Engine end no. manual transmission	Engine end no. automatic transmission	Vehicle ident end no. A	Vehicle ident end no. F
107.041	103.982	001471–001616	006345–006961	072735– 076997	–
124.026	103.940	014211–016180	027763–033038	534506– 596298	–
124.030/050/090	103.983	015511–017498	078723–088958	534506– 596298	047498– 1)
124.226	103.943	000051–000108	000089–000233	534506– 596298	–
124.230/290	103.985	000205–000495	000668–001752	534506– 596298	047617– 1)
126.020	103.941	002644–002910	008437–009406	350790– 370272	–
126.024/025	103.981	004372–004851	035466–040974	350790– 370272	–
201.029	103.942	004292–006311	007082–009100	391324– 409823	387198– 1)

1) not recorded

Production breakpoint: November 1987

Model	Engine	Engine end no. manual transmission	Engine end no. automatic transmission
124.026	103.940	017222–017258	036754–036847
124.030/050/090	103.983	–	096881–096991
124.230/290	103.985	only 000616	002230–002239
126.020	103.941	003031–003035	009996–010009
201.029	103.942	007387–007401	010284–010299

Models 107, 124, 126, 201

Injection valves with identification on shaft
000 078 56 23.

Production breakpoint: September 1988

Model	Engine	Engine end no. manual transmission	Engine end no. automatic transmission
107.041	103.982	002104	009200
124.026	103.940	024034	054766
124.030/050/090	103.983	026749	137957
124.226	103.943	000328	000773
124.230/290	103.985	001558	005572
126.020	103.941	003669	012386
126.024/025	103.981	006194	068839
201.029	103.942	011563	016436