


## 35-519 Bleeding the ASD hydraulic system

Operation no. of operation texts and work units  
or standard texts and flat rates:  
35-0425

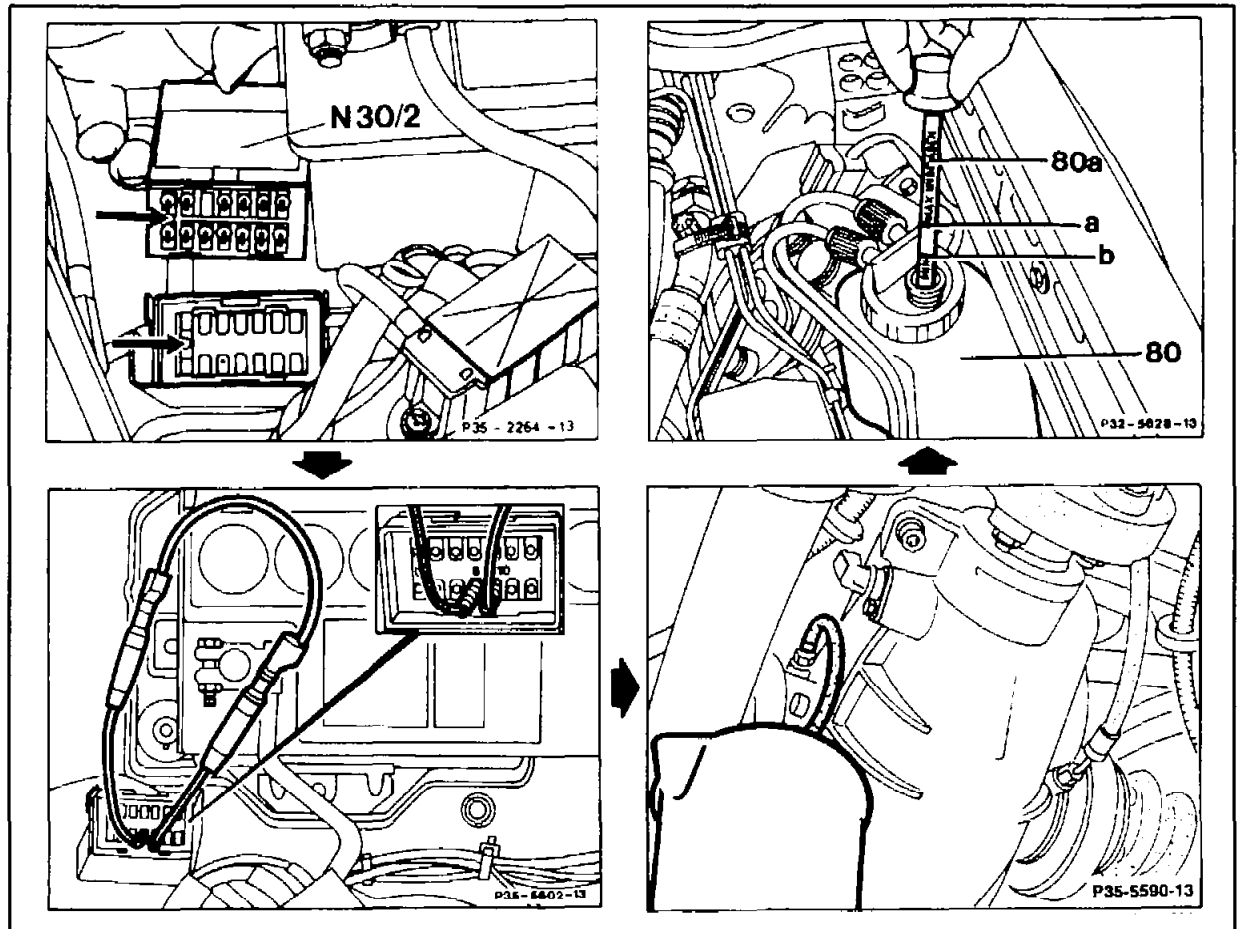

P35-5601-57

ASD control unit (N30/2) .....

Disconnect, connect. Note locking pin when connecting (arrows).

On the connector of the ASD control unit .....

Bridge sockets 8 and 10. To do this, use cables of 2.5 mm and 4.0 mm plug dia. from electrical connection set 201 589 00 99 00.

### Note

When the ignition is switched on, the solenoid valve is triggered and thus opened by bridging.

Engine .....	start, switch off. Allow to idle.
Bleed screw on right ring cylinder .....	Open, close. Bleed until oil escapes without any bubbles.
Oil level in reservoir (80) .....	Check, correct if required. Filling funnel 126 589 12 63 00.

**Types of oil**

Hydraulic oil, 1.0l can

---

**Special tools**

