


42-0708 Removal and Installation of ABS control unit

Operation no. of operation texts and work units or standard texts and flat rates:
42-8251

A. Model 124 (except 124.034), 129.060/061/066, 201, 202

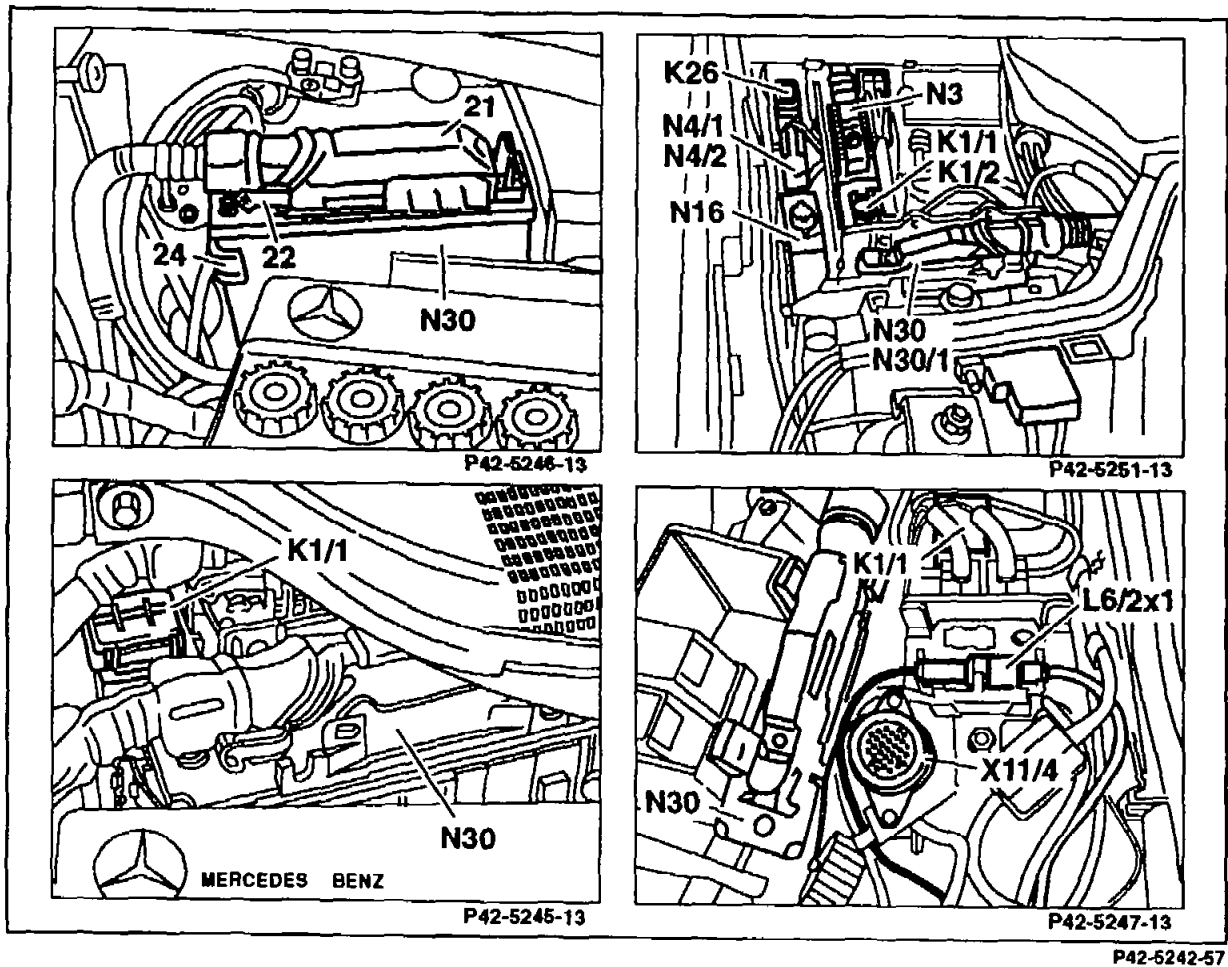

Ignition
Clip (22)

OFF.
unsnap and extract plug from ABS control unit.
When reinserting the plug in the ABS control unit (N30), ensure that it snaps into place audibly.

Model 202
Bolts
ABS control unit (N30)
.....

remove, install.
remove from bracket, reinstall.
remove from bracket, reinstall.

Model 124, 129, 201





Test program	perform (42-0720/Chassis Diagnosis Manual, Volume 2).
Model 202	
Fault memory	read out, then erase (Chassis Diagnosis Manual, Volume 2).

Note

Phased in as of 04/86 the ABS control units are enclosed in a plastic housing instead of an aluminum housing. The control units are interchangeable.

On vehicles with ABS, which are also fitted with the ASD, ASR or 4MATIC systems, the system-related control unit is valid in each case.

B. Model 124.034, 129.058/063, 140

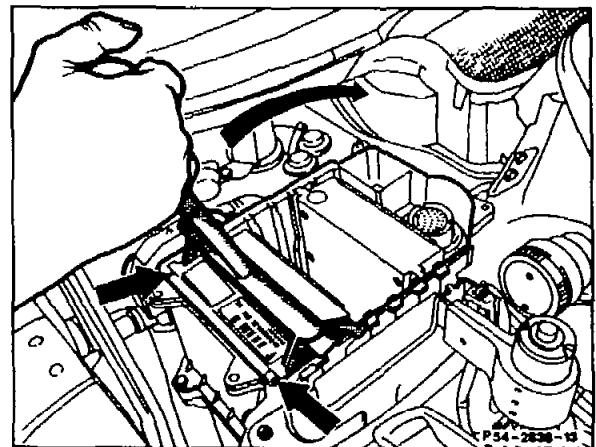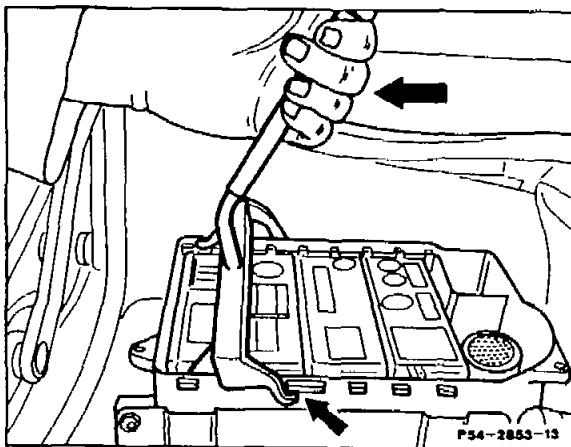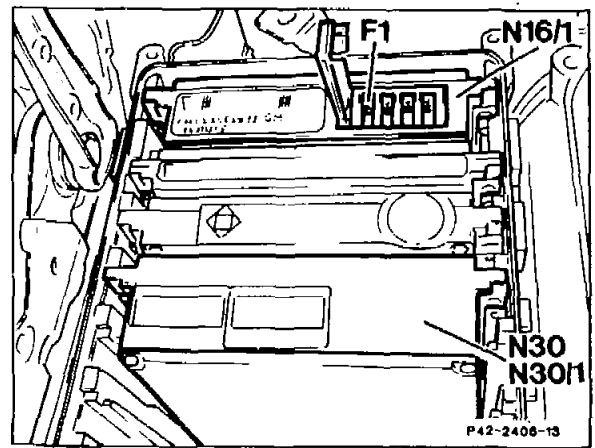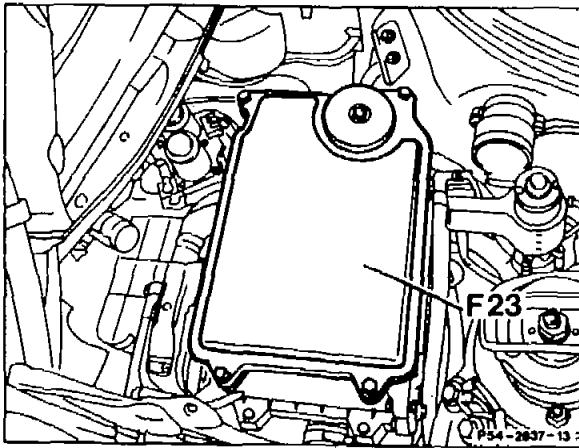

Ignition
 Module box cover (F23)
 Control unit (N30)
 Fault memory

OFF.
 detach, refit.
 extract/press on with special tool
 140 589 01 33 00.
 read out, then erase (Chassis Diagnosis
 Manual, Volume 2).

Special tool

