
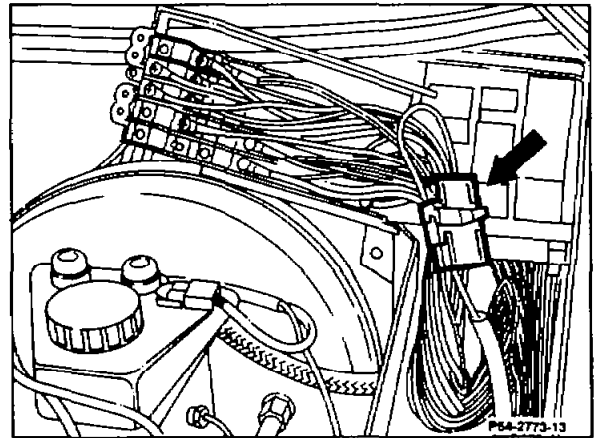


54-0180 Installing separate fuse for blower motor (up to 06/86)

Operation no. of operation texts and work units or standard texts and flat rates:

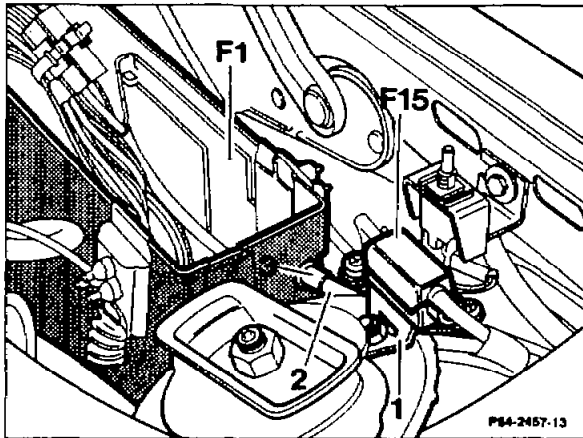

Ground cable at battery	disconnect.
Bracket (1) for auxiliary fuse box (F15) at left suspension dome	screw on.
Auxiliary fuse box (F15)	attach to bracket (1).
Fuse carrier	remove (54-1255).
Additional wiring harness (2)	run along existing wiring and run through grommet (3) into fuse and relay box (F1).
Cable (pink/grey) with cable shoe of auxiliary wiring harness (2)	connect at input fuse 12.
Cable (black/green)	disconnect at output fuse 12 and connect to 1-pin terminal block (arrow).
Terminal block (arrow)	secure to wiring harness in fuse and relay box (F1).
Fuse carrier	install (54-1255).
Ground cable at battery	connect.
Fuse insertion strip	replace.
Function check	perform.

Parts

Qty.	Designation	Part no.
1	Auxiliary wiring harness with fuse box	126 540 30 13
1	Bracket	124 545 53 40
1	Terminal block	000 540 08 69
1	Cable strap	001 997 42 90
2	4.2 × 13 self-tapping screws	007981 004244
1	Fuse insertion strip (USA) and French	124 545 09 00
1	Fuse insertion strip German and English	124 545 10 00
2	Screws	007985 004123
2	Spring lock washer	912004 004102

