


54-3190 Removing and installing switches in center console


Operation no. of operation texts and work units or standard texts and flat rates:

A. Removing and installing top switches

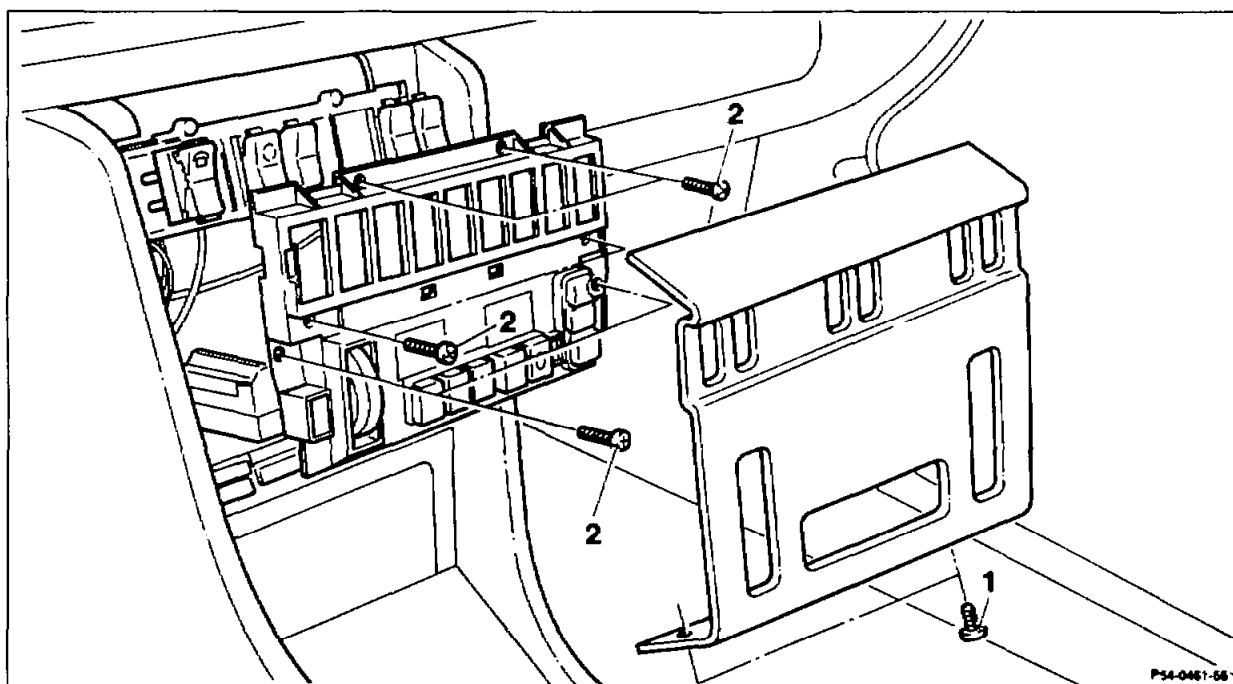

Screws (1)	unscrew, screw in.
On vehicles with automatic heater control or air conditioner	unplug the control switches for blower and air distribution, plug in.
Nuts located below	unscrew, screw on.
Wooden trim	take off, fit on.
Screws (2)	unscrew, screw in.
Switches	pull out, press in.

B. Removing and installing bottom switches

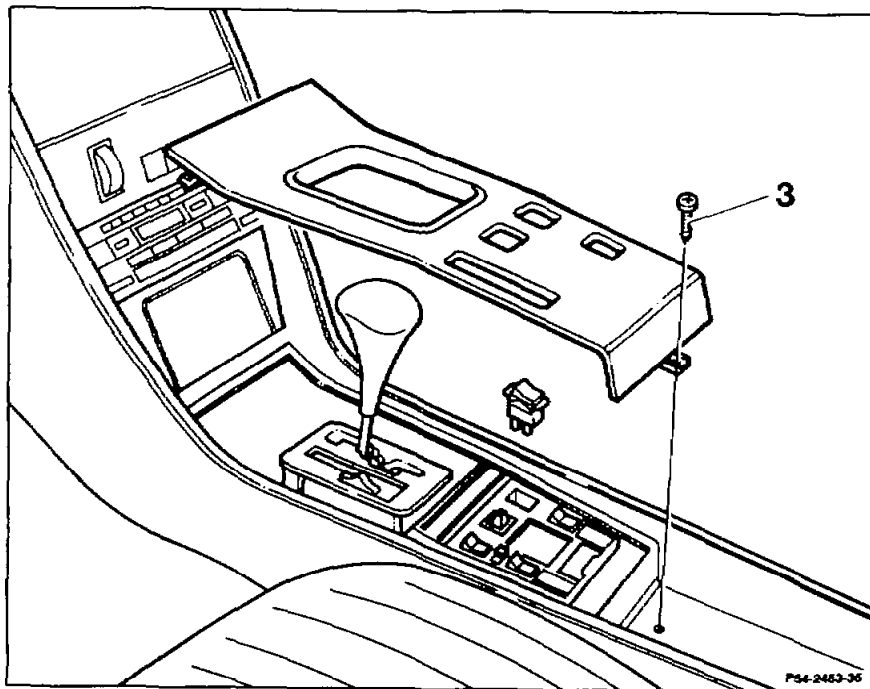

Screw (3)	unscrew, screw in.
Cover	pull out to the rear, insert.
Switches	pull out, press in.

Note

The couplings are clipped into place in the switch carriers.