


54-5320 Removing and Installing speedometer

Preceding work
Instrument cluster removed (54-6015)

Operation no. of operation texts and work units or standard texts
and flat rates:

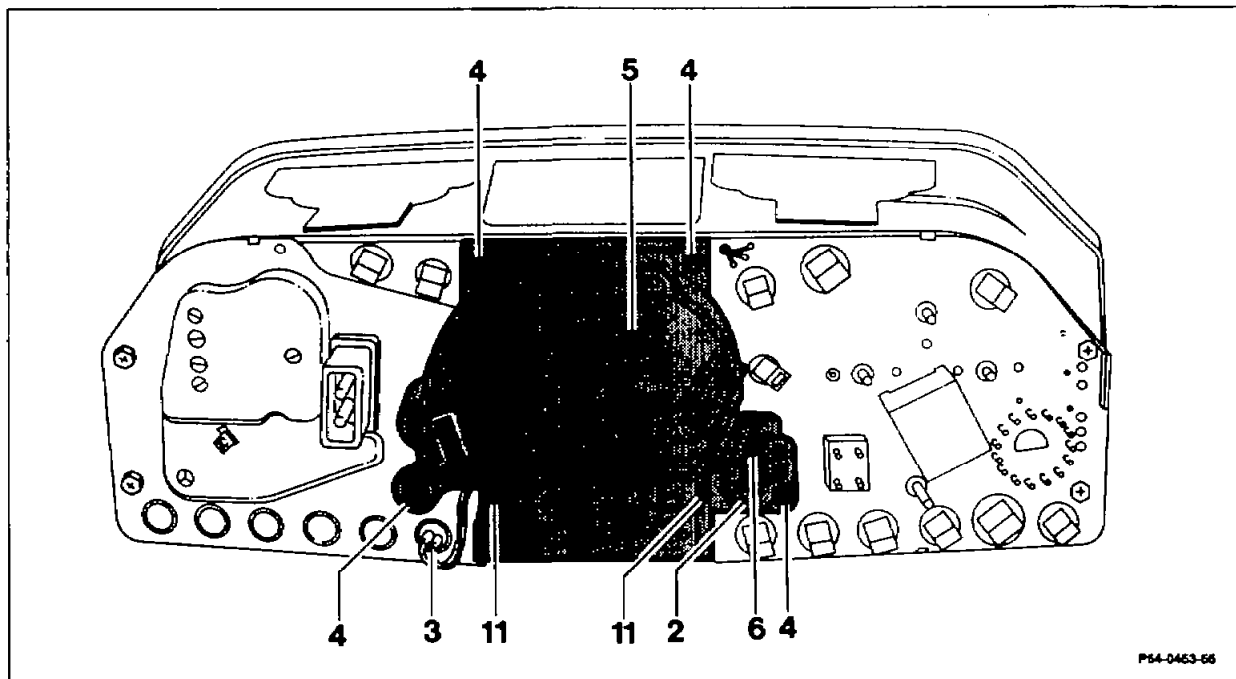

PS4-0463-66

Phillips screw (6)	unscrew, screw in.
Rheostat (2)	remove, install.
Indicator lamp (3) of windshield washer fluid level	remove, insert.
Cable (arrow)	unclip, clip into place.
Phillips screws (4)	unscrew, screw in.

Vehicles with outside temperature display

Phillips screws (11)	unscrew, screw in.
Speedometer (5)	take out, insert.

Note

1 The version up to 09/85 indicator lamp (3)
for windshield washer fluid level in 2nd field.

2 Version as of 10/85 indicator lamp (3) for
windshield washer fluid level in 1st field.