


## 54-5600 Removing and installing speedometer shaft (except model 124.034/036)

Preceding work (except models 124.034/036):  
Instrument cluster removed (54-6015).

Operation no. of operation texts and work units or standard texts  
and flat rates:

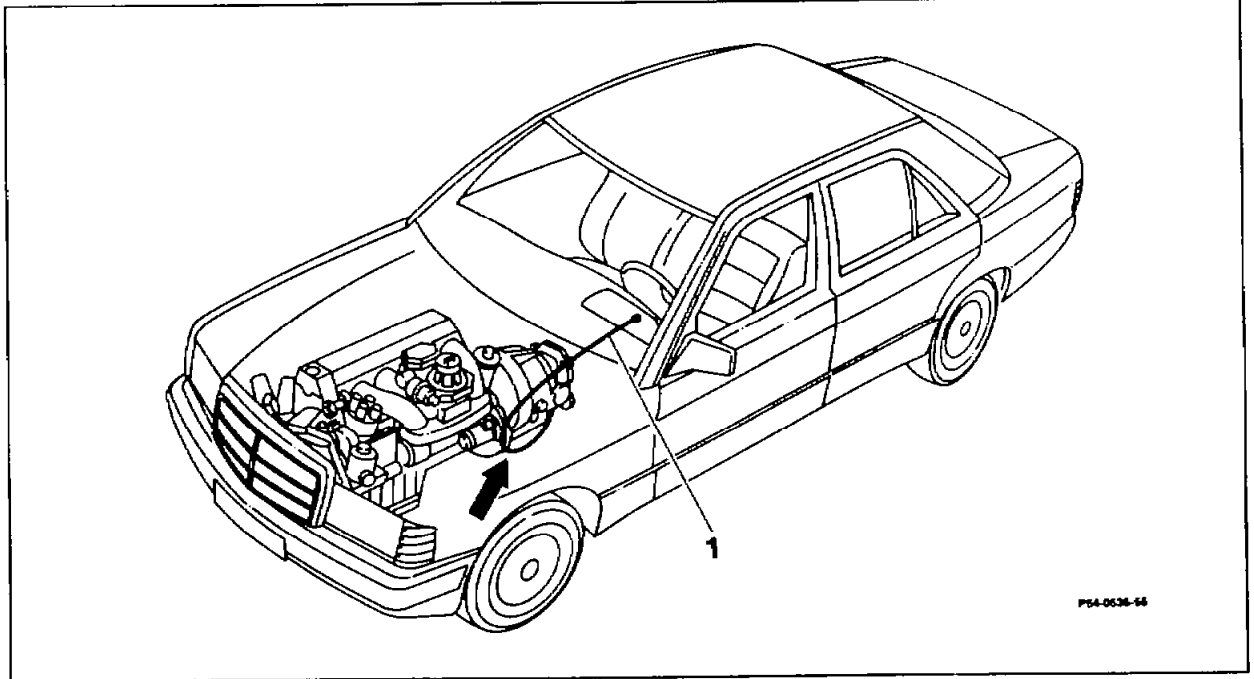

P54-0536-66

Speedometer shaft (1) at holder (arrow) . . . . .	unclip, clip in.
Carpet in left footwell . . . . .	remove, insert.
Speedometer shaft (1) from interior . . . . .	push through downward, introduce from below.

### Note

The speedometer shaft (1) must not be kinked or tensioned.

A guide tube has been installed as of 03/87 in the area below the instrument cluster as an anti-kink protection to facilitate removal and installation.