

72-160 Removal and installation of sealing strip

Removal, installation

- 1 Remove door lining on driver's door (72-100).
- 2 Force off sealing strip with plastic wedge and remove.
- 3 Position sealing strip at front flush and force into door inside plate.
- 4 Install door lining.

