


72-198 Removal and installation of flexible window rail on driver's door

Removal

- 1 Remove door lining (72-100).
- 2 Remove sealing strip inside (72-160).
- 3 Loosen plastic foil in front, lower range.
- 4 Loosen nut on window lifting arm, front.
- 5 Pull out flexible window running rail.

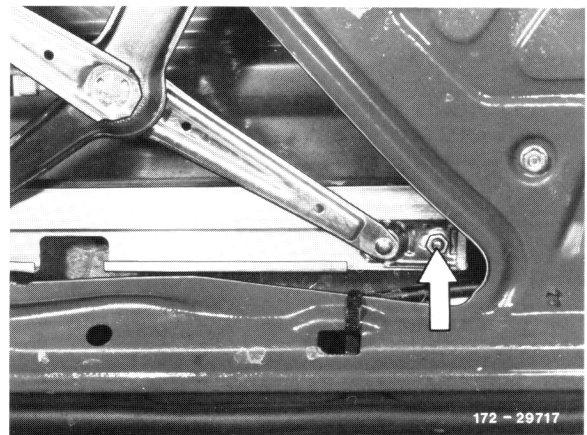

Installation

- 6 Coat window running rail with soap solution and insert into holding rail.
- 7 Push window running rail at front over assembly opening into holding rail.
- 8 Install sealing strip inside.
- 9 Adjust crank window (72-195).
- 10 For further installation proceed vice versa.

