

## 72-199 Removal and installation of flexible window rail on rear door

---

### Removal, installation

---

- 1 Let crank window down.
- 2 Pull window running rail out of holding rail.
- 3 Coat window running rail with soap solution.
- 4 Slide window running rail into holding rail and force in.

