


72-231 Removal and installation of inside door actuation on rear door

Removal, installation

- 1 Remove door lining (72-101).
- 2 Loosen plastic foil in upper range.
- 3 Unclip pulling and locking linkage, front.

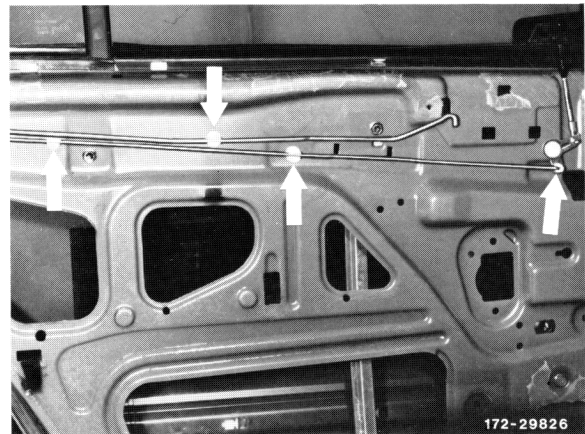

- 4 Disengage pulling and locking linkage on door lock and remove.
- 5 For installation proceed vice versa.

