
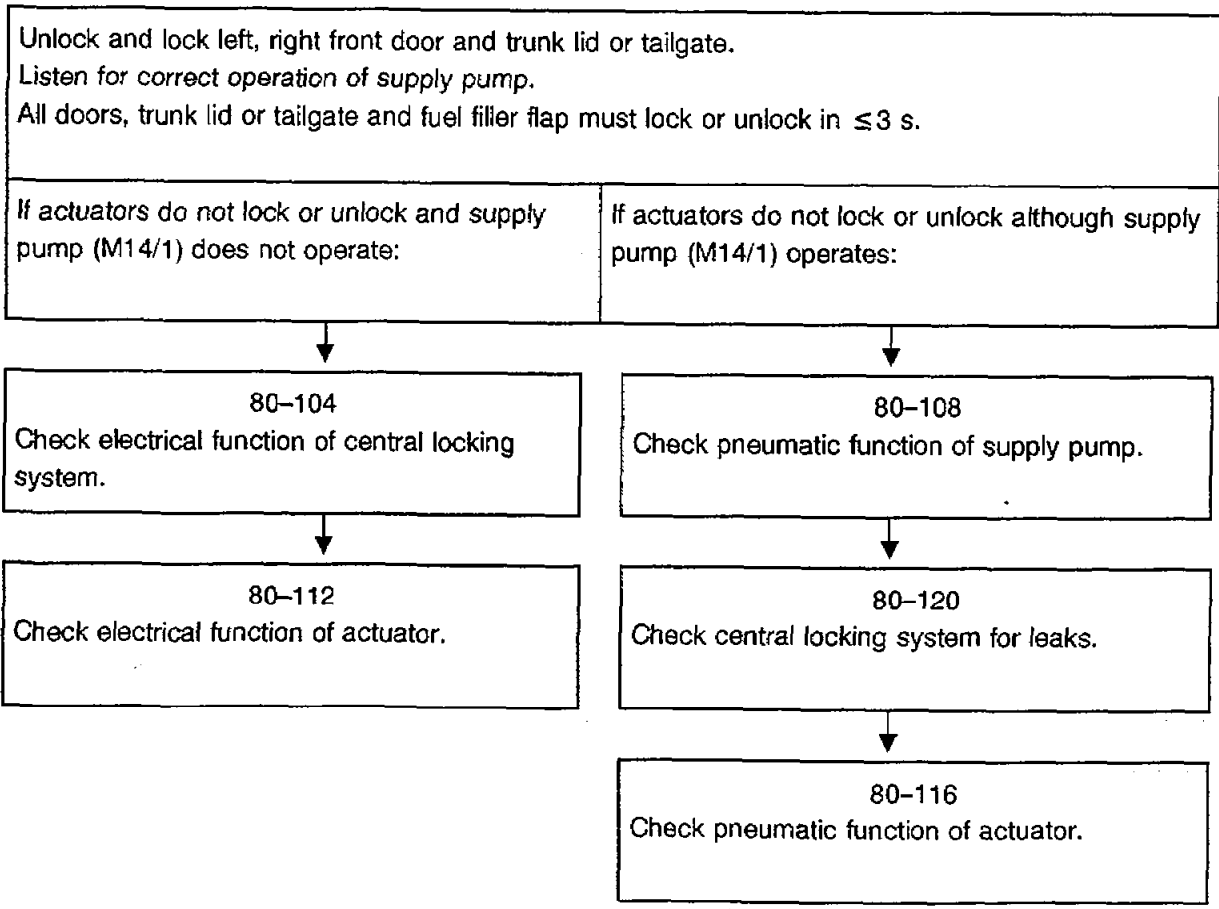


80-090 Checking function of central locking system

Operation no. of operation texts and work units
or standard texts and flat rates 80-0020

1st version except (D) as of 03/94 and vehicles with code 885

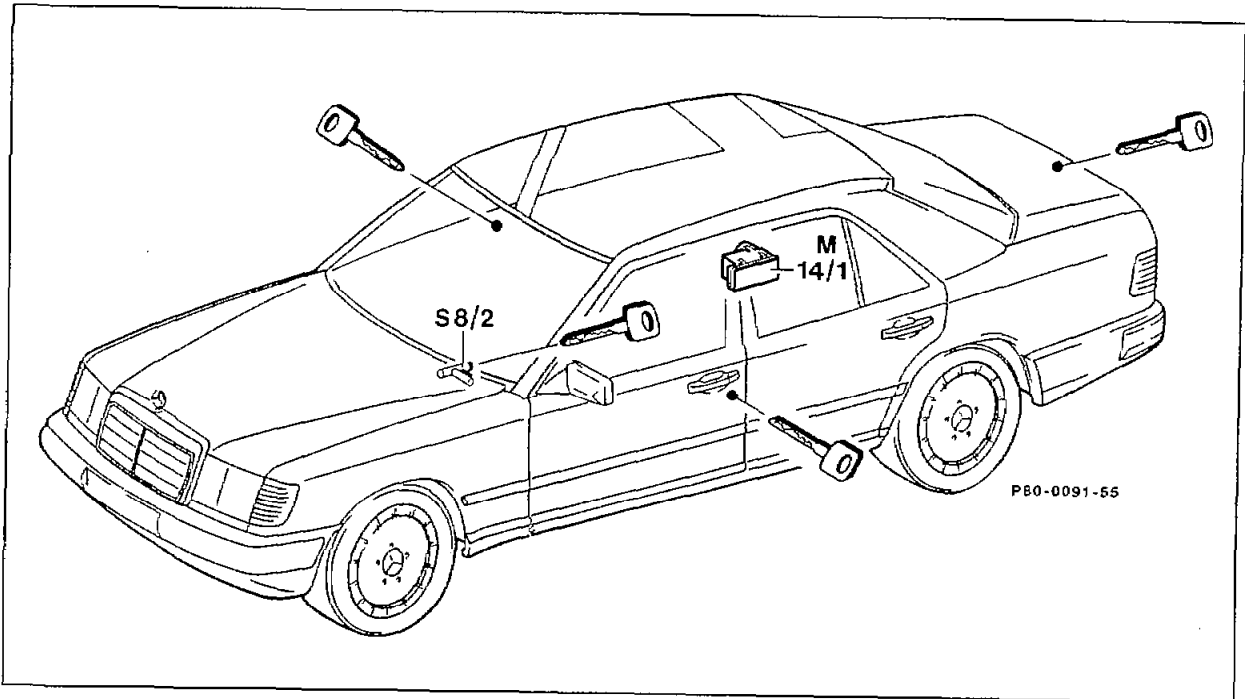

Following repairs, additionally check!

Setting of actuator

Lock left and right front doors with key and keep a watch on locking buttons on the other doors. After locking button has moved 6 – 8.5 mm, the central locking system must lock the car. Remove and install actuator if necessary, set (80–215).

Lock on right front door to prevent inadvertent locking out

Move key in steering lock position 1 or 2 and press locking button on right (left for RHD) front door through the opened window. Central locking system must now not lock car. Renew lighting/central locking system warning buzzer contact (S8/2), if necessary (46–640).

Note

As of the introduction of new features in 09/89 up to approx. the middle of 09/89, the anti lock-out device is rendered inoperative on models 124 sedan and coupé with tilting/sliding roof and/or electric power windows.



Note microfilm "Up-to-date trouble diagnosis" or "Trouble diagnosis".

Note

After completing the repair work and prior to function test, disconnect ground cable to the battery for approx. 10 s to neutralize fault-current detection of the supply pump.

2nd version for  only as of 03/94 and vehicles with code 885

See diagnosis manual