


## 80-270 Removing and installing supply pump (M14/1)

Preceding operation:  
Check electrical function of central locking system (80-104)

Operation no. of operation texts and work units  
or standard texts and flat rates ..... 80-0030


### A. Sedan, coupé and cabriolet

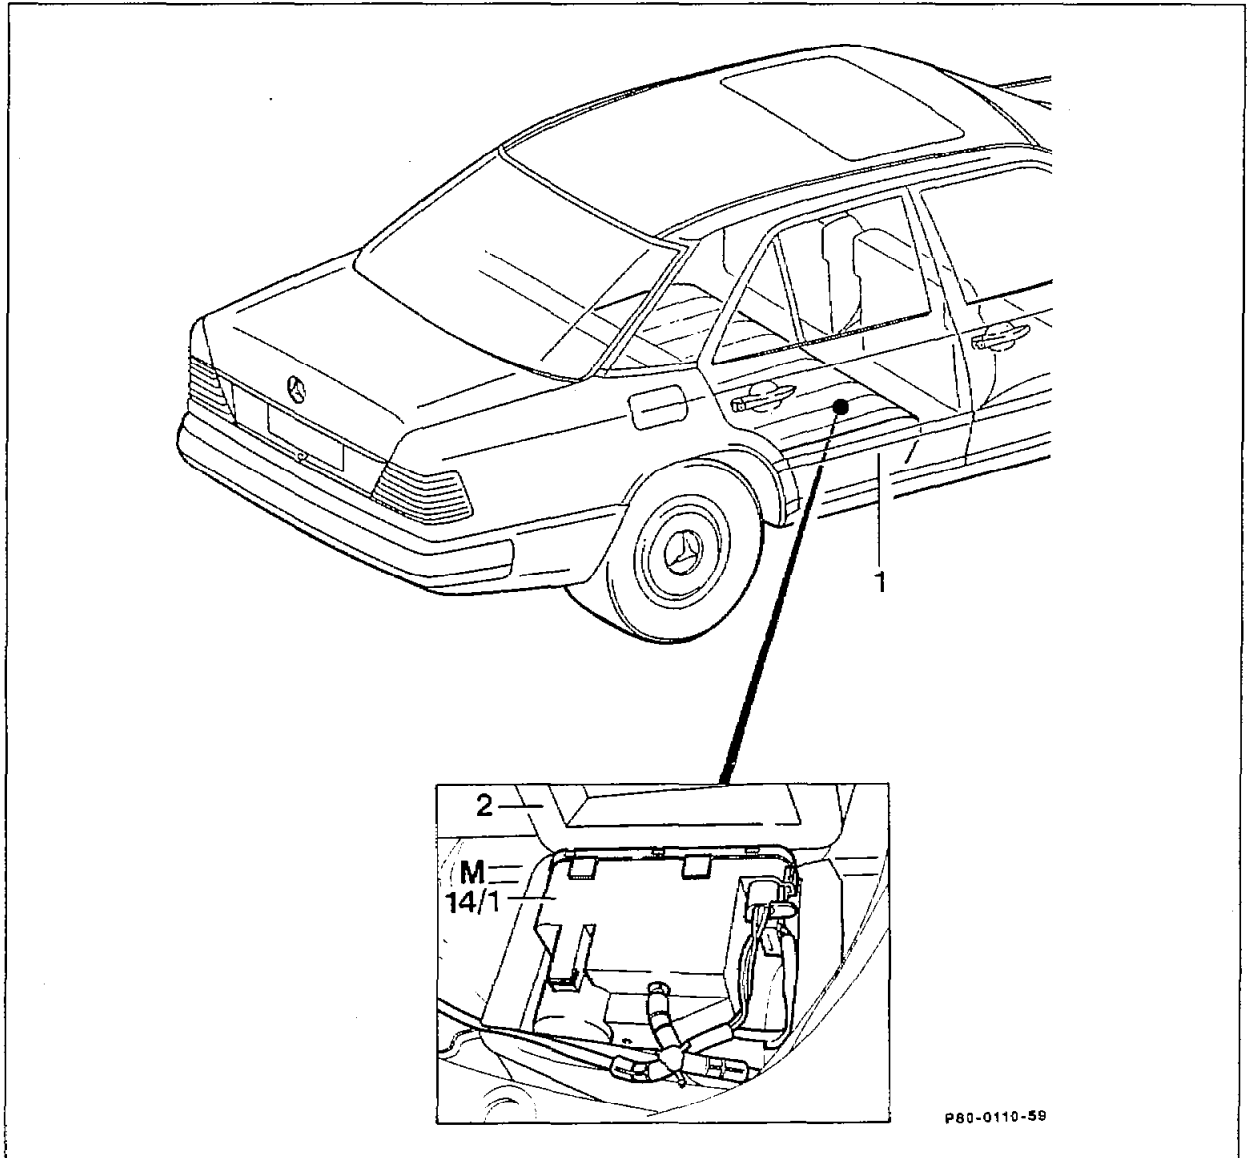

|                           |                                |
|---------------------------|--------------------------------|
| Rear seat squab (1) ..... | remove.                        |
| Foam cube (2) .....       | withdraw from recess and open. |
| Supply pump (M14/1) ..... | remove.                        |

|   |                           |
|---|---------------------------|
| Pneumatic lines or electric leads .....   | disconnect.               |
| Electrical function of central locking system or<br>pneumatic function of supply pump ..... | check (80-104 or 80-108). |
| Supply pump (M14/1) .....   | install in reverse order. |

## B. Station Wagon

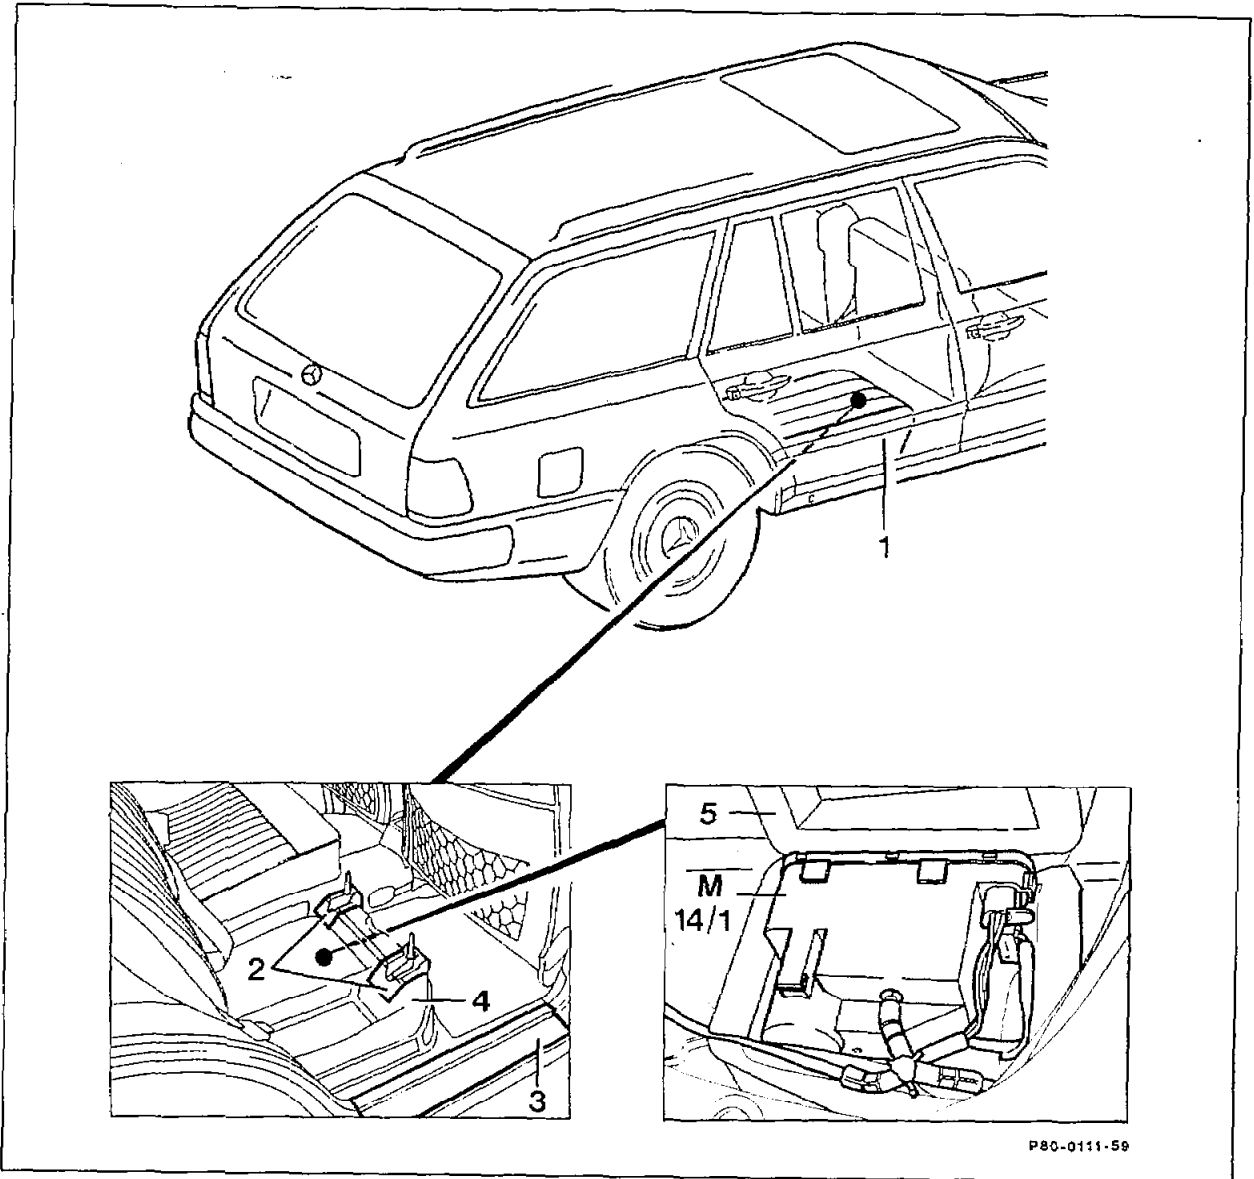

P80-0111-59

- |  |  |
|--|--|
| Right rear seat squab (1) .....                        | remove.  |
| Cover (2) .....  | remove.  |
| Cover at entry (3) .....                               | remove.  |
| Clips for fixing carpet below cover .....              | press out.   |
| Rear carpeting (4) below panelling at wheelhouse ..... | pull forward and carefully fold in toward centre of vehicle. |

|   |                                |
|---|--------------------------------|
| Foam cube (5) .....   | withdraw from recess and open. |
| Supply pump (M14/1) .....   | remove.                        |
| Pneumatic lines or electric leads .....   | disconnect.                    |
| Electrical function of central locking system or<br>pneumatic function of supply pump ..... | check (80-104 or 80-108).      |
| Supply pump .....   | install in reverse order.      |

