


## 80-455 Removing and Installing RCL control module (N54) and IR DAS control module (N54/1)

### Note:

Only applicable for models 124.060, 062, 066 as of 03/96.

IR DAS control module N54/1 (PWM version) on model 124.060


- 1 2-pin PWM connector
- 2 12-pin connector
- 3 Nut
- 4 27-pin connector
- 5 Nut
- N54 RCL control module
- N54/1 IR DAS control module

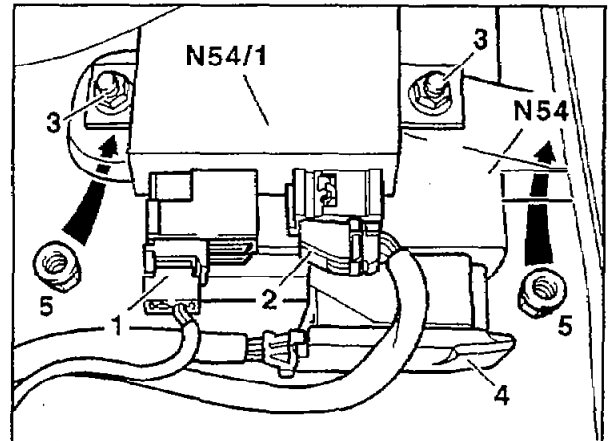

P80.30-0304-01

IR DAS control module N54/1 (CAN version) on models 124.62, 066

- 1 2-pin CAN connector
- 2 18-pin connector
- 3 Nut
- 4 27-pin connector
- 5 Nut
- N54 RCL control module
- N54/1 IR DAS control module

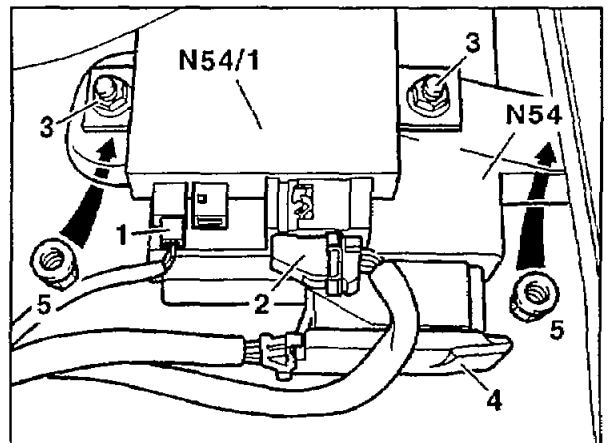

P80.30-0303-01

Passenger airbag .....	remove.
Electrical connectors (1, 2) .....	disconnect from IR DAS control module (N54/1)
Nuts (3) .....	unscrew.
Control module (N54/1) .....	remove.

### Note:

When the control module or one of the remote control keys is replaced it is absolutely necessary to indicate the lock number, because the two parts are matched to one another. After replacing the IR DAS control module (N54/1) perform version coding according to diagnosis manual, body.

Electrical connector (4) .....	disconnect from RCL control module (N54).
Nuts (5) .....	unscrew.
Control module (N54) .....	remove.

**Note:**

When the control module or one of the remote control keys is replaced it is absolutely necessary to indicate the lock number, because the two parts are matched to one another.

Reinstall .....	in opposite order.
-----------------	--------------------