


82-0255 Removing and Installing trunk lamp switch

Preceding work:

Parcel shelf removed (68-458) version up to 07/85.
 Trim on rear pillar removed (68-449) version up to 07/85.

Operation no. of operation texts and work units or standard texts
 and flat rates:
 82-1520, 82-1521

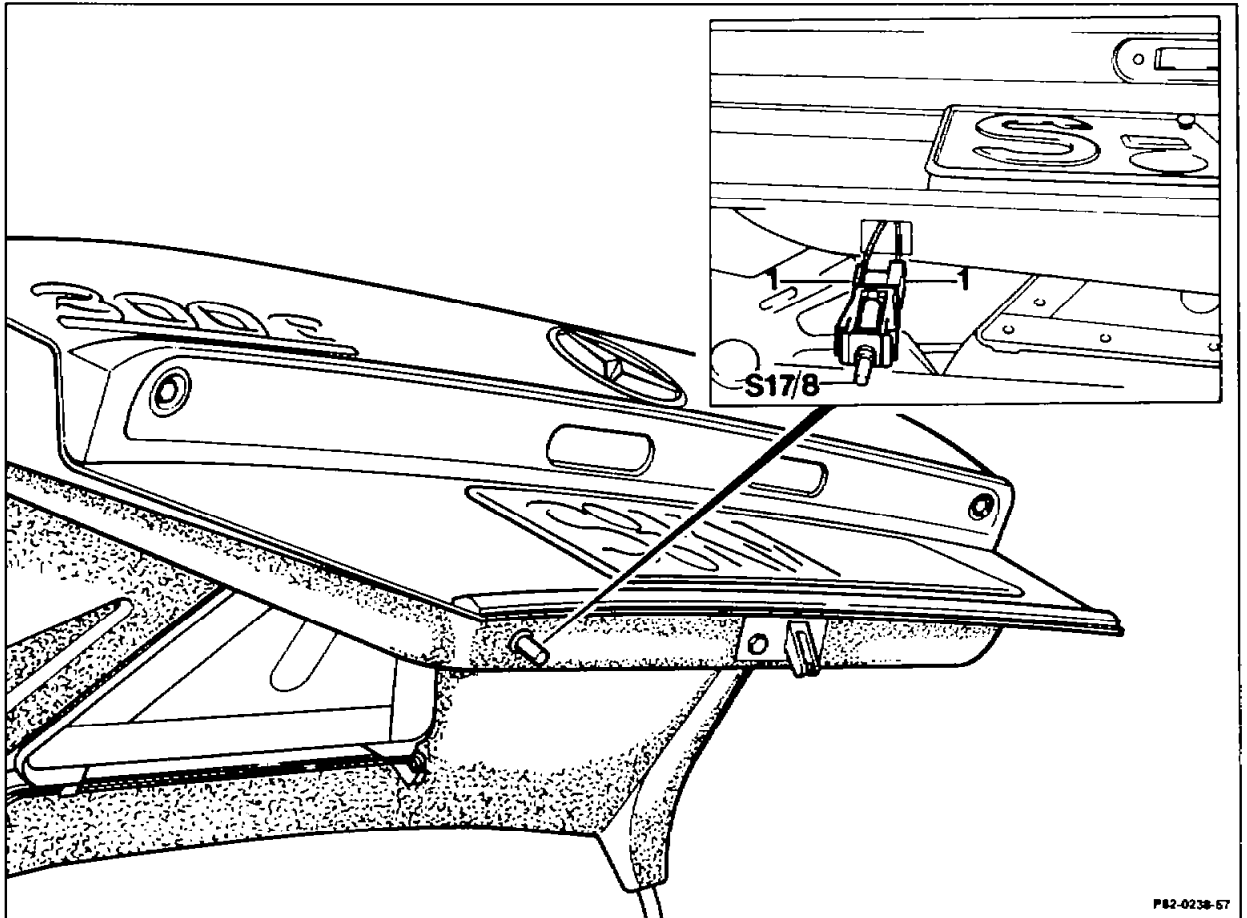


Version as of 08/85

Trim of trunk lid	remove, install (as of 08/89).
Trunk lamp switch (S17/8)	unclip, clip in place (arrow).
Electrical connection (1)	disconnect, plug in.

Note

As of 11/87 the trunk lighting can be switched off manually at the switch by pulling the pin.

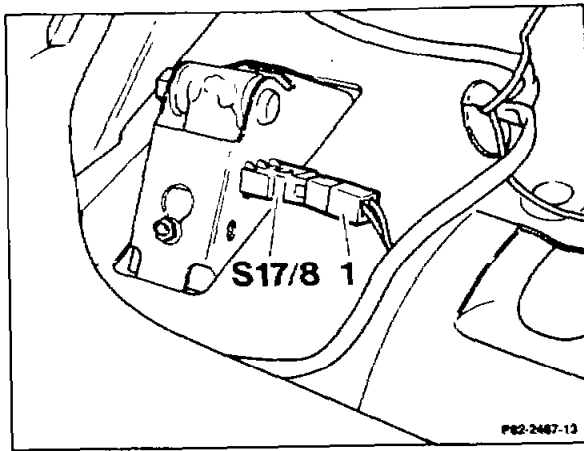

P82-2487-13

Version up to 07/85

- | | |
|---------------------------------|------------------------|
| Electrical connection (1) | disconnect, plug in. |
| Trunk lamp switch (S17/8) | unclip, clip in place. |