

## 82-0865 Removing and Installing power seat adjustment switch


---

Operation no. of operation texts and work units or standard texts and flat rates:


### Removal

---

- 1 Disconnect ground cable at battery.
- 2 Pull off molded controls (1, 2, 3).

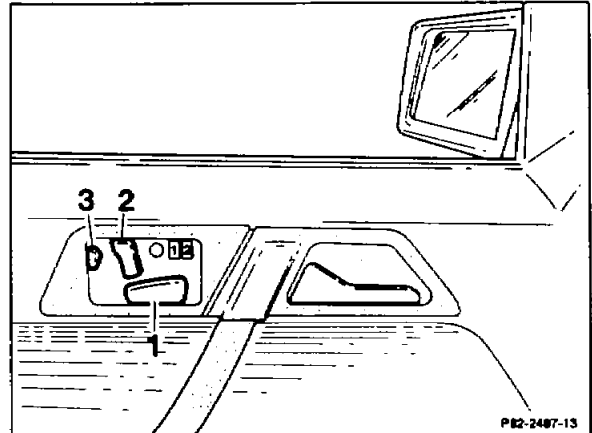

- 3 Unclip cover (4) (arrows) and take off.

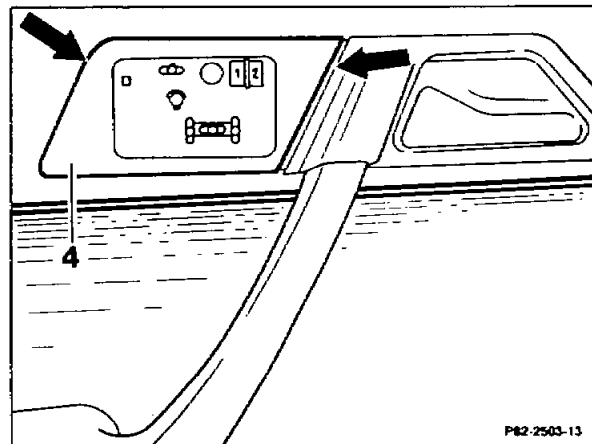

- 4 Unscrew switch (arrows) and detach plug connectors of wiring harness from switch.

### Installation

---

The parts are installed in the reverse order. Connect battery and check operation of power seat.

