


Removal, installation

- 1 Remove engine hood (88-300).
- 2 Mark position of engine hood hinge on wheelhouse in engine compartment.
- 3 Remove inner fender.
- 4 Disengage spring on engine hood hinge.


Shown with front fender removed

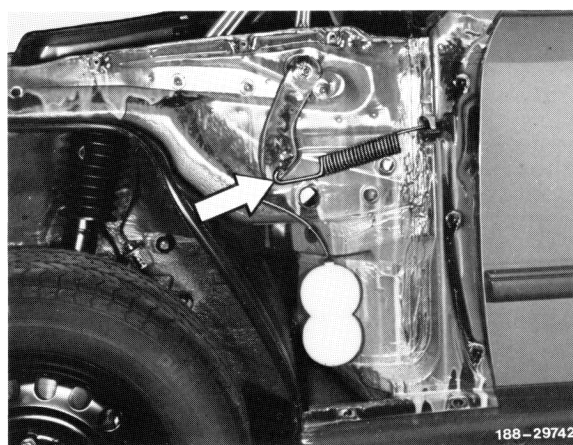

- 5 Unscrew nuts, remove spring holding bracket and engine hood hinge.

Note: During installation, plug on spring holding bracket in such a manner that the spring holding bracket points horizontally forward when the engine hood is closed.

Shown with front fender removed

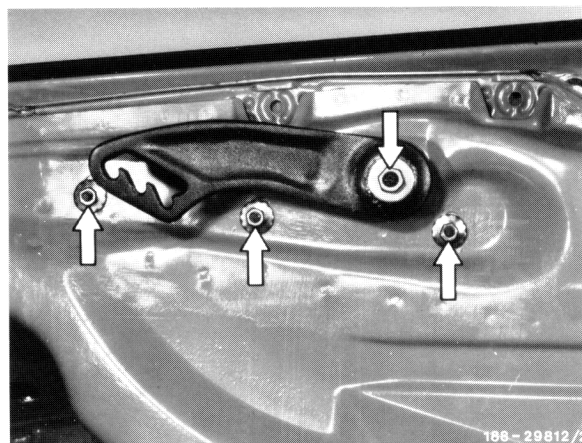

- 6 For installation proceed vice versa.