


91-638 Removing and installing belt buckle

Op. No. of Job Texts and Work Units,
Standard Texts and Flat Rates

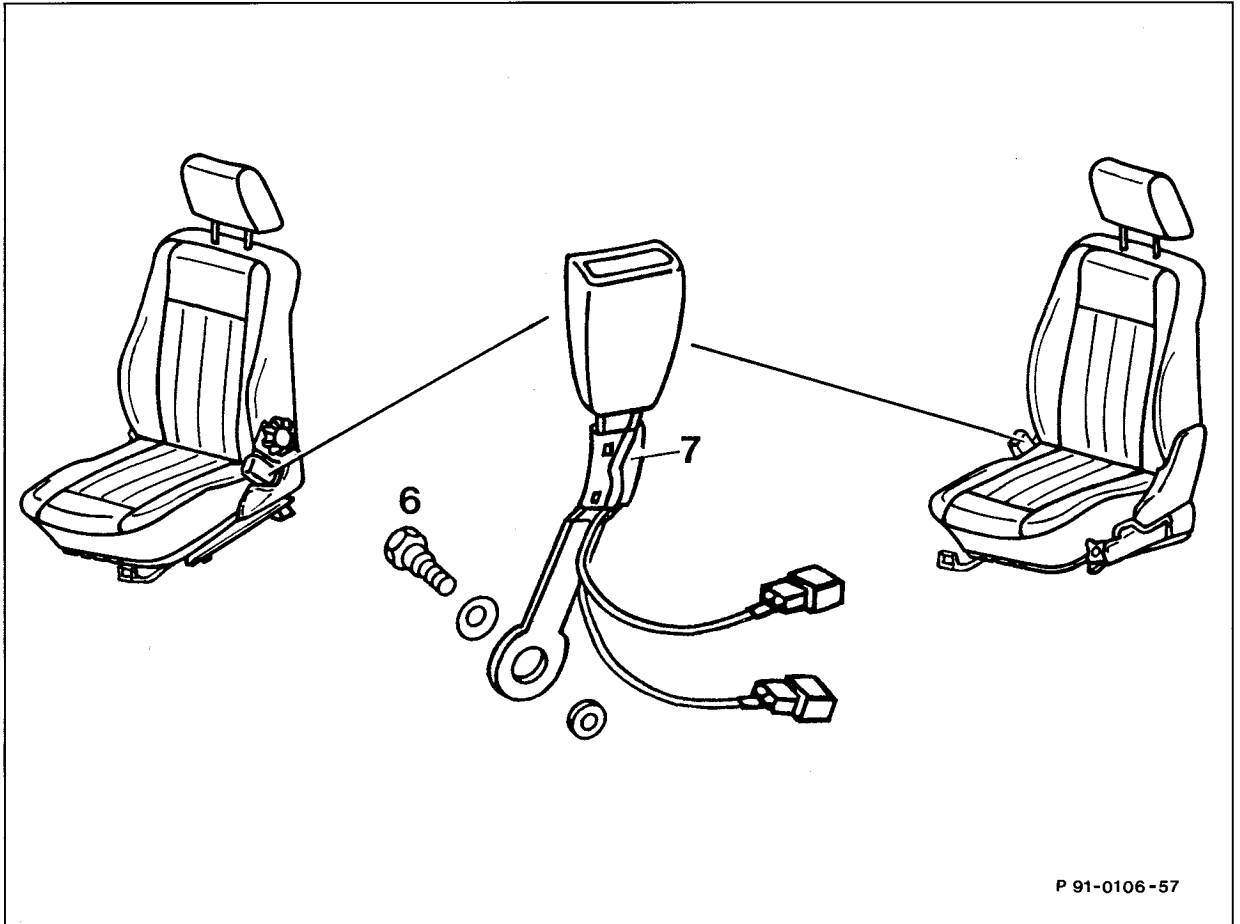

P 91-0106-57

Driver's and/or passenger's seat	Remove, install (91-100/110).
Covering on fixed seat fitting	Pull to the rear, pull off sideways and remove; install.
Bolt (6) on belt buckle	Unscrew, screw in.
In vehicles with airbag, belt reel, belt warning	Open, close cable straps under seat cushion.
Complete belt buckle (7) with cable	Remove, install.

91.0201 - 638/1