


# 91-900 Removal and installation of roll-over bar

Preliminary work:  
 Rear seat and rear seat backrest removed (91-170).  
 Observe safety regulations (91-820).

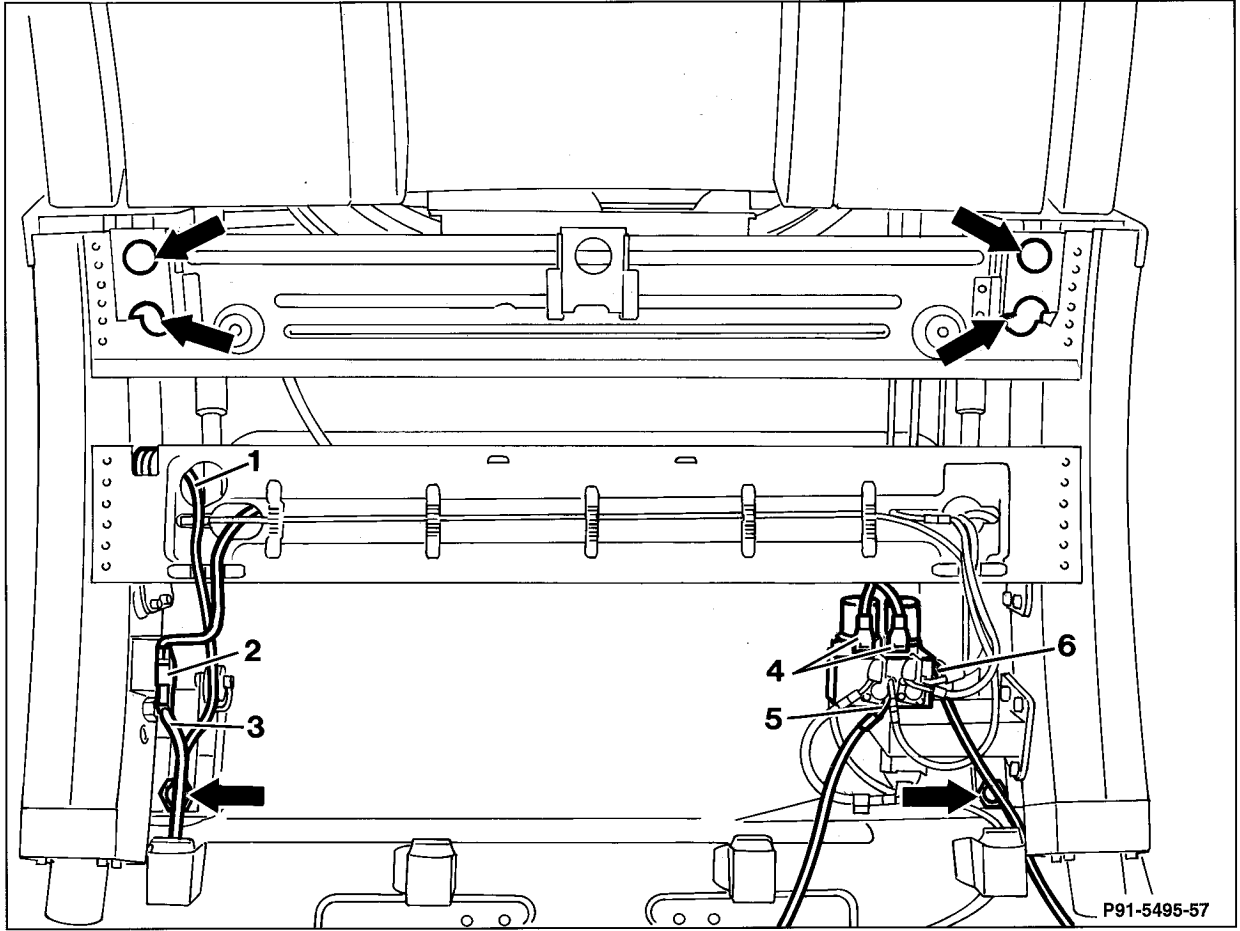

P91-5495-57

Roll-over bar ..... extend.

**Note**  
 If the roll-over bar cannot be extended with the convenience switch, use the crash actuation (91-170).

- Plug connection (1) S83/6 ..... disconnect, reconnect.
- Plug connection (2) X23 ..... disconnect, reconnect.
- Plug connection (3) S83/5 ..... disconnect, reconnect.
- Plug connection (4) Y57y10, y11 ..... disconnect, reconnect.
- Hydraulic line (5, 6) no. 10, no. 14 ..... disconnect at valve block Y57, reconnect.



Plug the hydraulic lines and connections on the valve block immediately.

Hydraulic line no. 10

Female plug 129 589 00 91 07  
Male plug 129 589 00 91 11

Hydraulic line no. 14

Female plug 129 589 00 91 08  
Screw plug 129 589 00 91 09

Screws (arrows) .....  
Roll-over bar .....

screw out, screw in.  
pry out, install.



Reinstall intermediate layer at top mount

Leakage .....  
System .....

check.  
check for proper function (91-830).

**Special tool**

