

## Remove and install

- 1 Pull off edge protection in range of trim.
- 2 Remove rear compartment lamp.

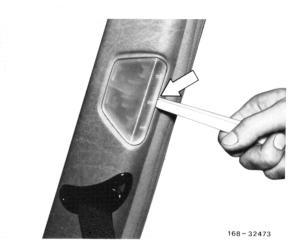

3 Disengage holding clamp with plastic wedge and remove trim.

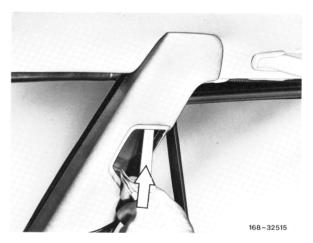

4 Unscrew belt end fitting on vehicle floor and remove trim.

