


Control unit (N22)	Remove (83-635, section A)
Fresh/recirculated air switch (S24)	Pull out, check
In reverse order	Install

Testing

- 1 Connect ohmmeter to terminals 3 and 4.

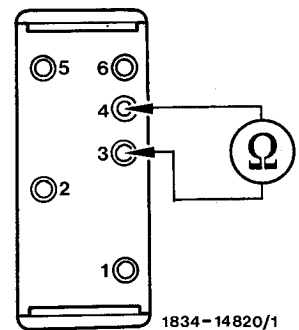


83, 648-648/1

2 Switch on switch (S24) and hold (arrow).


Nominal value: $0 - 1 \Omega$

3 Release switch (S24).

Nominal value: ∞

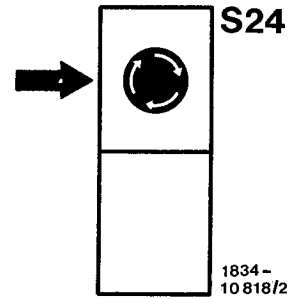

4 Afterwards connect to terminals 2 and 4

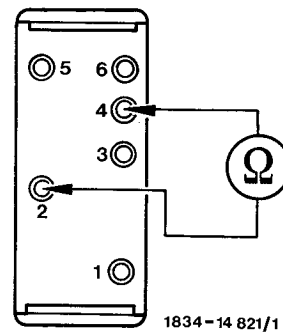

5 Switch off switch (S24) and hold (arrow).

Nominal value: ∞

6 Release switch (S24).

Nominal value: $0 - 1 \Omega$

